

GB1 Keypad Reference

Button	In PROGRAM MODE ¹	In MONITOR MODE
PROFILE (pushed once followed by digit)	Selects profile for viewing or changing	Selects profile for viewing or changing and changes mode to PROGRAM MODE
(pushed once followed by ENTER)	Backs up to previous step	
(pushed once followed by MODE)		Displays current target temperature
(pushed twice)	Returns to beginning of profile for review	
MODE ²	Selects MONITOR MODE	Selects PROGRAM MODE
CLEAR	Clears entries so changes can be made	Clears errors; temporarily disables BAD1 and BAD2
HOLD (pushed once)	Denotes a hold, or soak, at a specified temperature	Holds oven at current temperature ³
(pushed twice followed by digit)	Designates link to another profile	
(pushed three or more times)	Toggles Auxiliary Relay ⁴ on and off	
ENTER/START	Completes a profile entry	Starts, restarts or skips steps in a profile
CANCEL	Erases the entire profile ⁵	Cancels a profile and returns to IDLE

NOTES:

1. A profile may continue to execute even while another profile is displayed or altered.
2. Proportioning GB1s have two monitor modes, one that displays power level and one that displays time. Pressing MODE advances along the cycle PROGRAM MODE → MONITOR TIME MODE → MONITOR POWER LEVEL MODE → PROGRAM MODE →
3. This temperature can be altered. See the HOLD key description in the “Keypad” section of the manual for details.
4. This action is available only on those GB1s that have the optional Auxiliary Relay.
5. The running profile cannot be erased; the oven must first be returned to IDLE.