



## GB5 Keypad Reference

Button	In PROGRAM MODE	In MONITOR MODE
<b>A (Pick Unit)</b> (pushed once followed by digit 1–9)	Selects profile for viewing or changing	Selects profile for viewing or changing
(pushed once followed by digit 0)	Selects SCANNING FUNCTION	Selects SCANNING FUNCTION
(pushed once followed by ENTER)	Backs up to previous step	
(pushed once followed by MODE)		Displays current target temperature
(pushed twice)	Prompts for copying or exchanging programs	
<b>B<sup>1</sup> (Mode)</b>	Selects MONITOR MODE	Selects PROGRAM MODE
<b>C (Clear)</b>	Clears entries so changes can be made	Clears errors; temporarily disables BAD1 and BAD2
<b>D (Hold)</b> (pushed once)	Denotes a hold, or soak, at a specified temperature	Holds oven at current temperature <sup>2</sup>
(pushed twice)	Programs looping feature	
<b>E (Start/Skip or Enter)</b>	Enters or reviews a program	Starts, restarts or skips steps in a program selected by digit <sup>3</sup>
<b>F (Cancel or Erase Pgm)</b> followed by digit <sup>3</sup>	Erases the entire program	Cancels a profile and returns to IDLE

### NOTES:

1. Proportioning GB1s have two monitor modes, one that displays power level and one that displays time. Pressing MODE advances along the cycle PROGRAM MODE → MONITOR TIME MODE → MONITOR POWER LEVEL MODE → PROGRAM MODE → ...
2. This temperature can be altered. See the HOLD key description in the “Keypad” section of the manual for details.
3. This digit is required by the “Confirmation Sequence”.